


1. Prepare a keyboard.



2. Connect the keyboard to the HMI, and reboot the HMI.

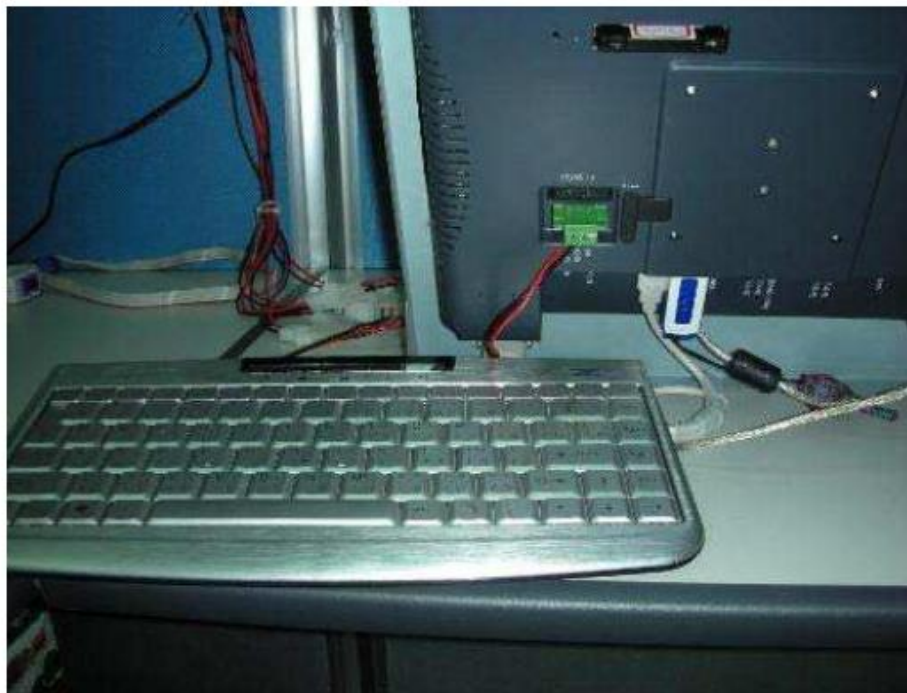

3. Press the SPACE key and hold it, don't loose it.
4. Choose "Upgrade System"



5. Choose "Restore the factory setting"

