


## PLC 连接手册使用说明

从 EasyBuilder Pro V5.05.01 起,当建立 PLC 设备时,在 PLC 设备旁新增 [打开 PLC 连接手册] 选项。点选 [打开 PLC 连接手册], EasyBuilder 会自动开启相对应的 PLC 连接手册。



此链接是放置在 EasyBuilder Pro 安装目录下的 PLC\_connection\_guide 文件夹中 (预设路径为 C:\EBpro\PLC\_connection\_guide\).

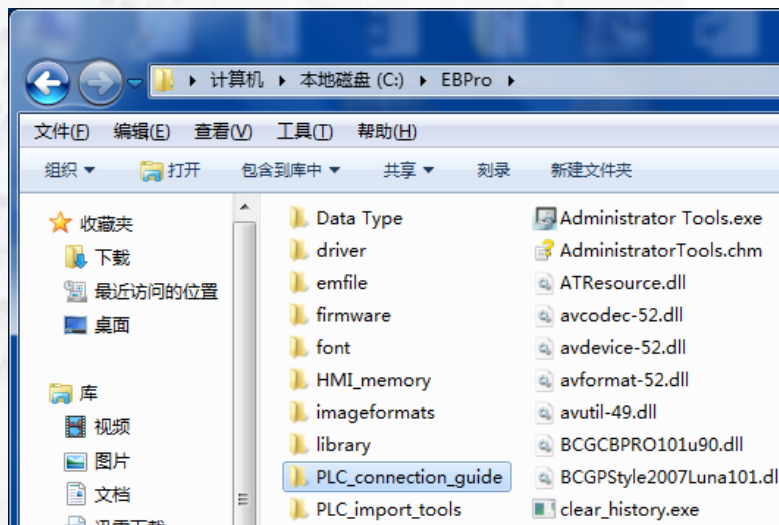

请参阅以下步骤进行安装:

1. 开启以下链接下载 PLC 连接手册压缩包。  
[https://dl.weintek.com/public/PLC\\_Connect\\_Guide/PLC\\_connection\\_guide.zip](https://dl.weintek.com/public/PLC_Connect_Guide/PLC_connection_guide.zip)
2. 将档案解压缩, 并放到 C:\EBpro\PLC\_connection\_guide 文件夹下。
3. 重启 EasyBuilder, 点选 [开启 PLC 连接手册], 即会开启 PLC 连接手册。

注: 在升级软件版本时, 请勿删除该“PLC\_connection\_guide”文件夹, 则升级后可继续使用该向导;

备注：点选以下网址可直接在网路上线上查询 PLC 连接手册：

<http://www.weintek.com/globalw/Software/PLC.htm>

#### Device Connection Structure

Weintek HMI and EasyBuilder Software support most of the PLC devices on the market. Please feel free to check the drivers and supports provided. The listed are all the Weintek supported devices:

1. Company	2. PLC Model	3. PLC Driver
Memory Map MIKOM ELECTRICAL TECHNOLOGY CO.,LTD. Mitsubishi Electric Corporation MODBUS IDA Moeller National Marine Electronics Association OMRON Corporation OuHua OHJX Panasonic Electric Works	Modbus ASCII CONTROLLER Modbus ASCII Server Modbus RTU CONTROLLER Modbus RTU TCP/IP device Modbus Server (COM/Ethernet)	MODBUS RTU MODBUS RTU (0x/1x Range Adjustable) MODBUS RTU (Adjustable) MODBUS RTU (zero-based addressing)